



Baby-LIN-3 Family

Getting started guide V1.0

Lipowsky Industrie-Elektronik GmbH

Römerstraße 57 | 64291 Darmstadt | Germany

Phone: +49 (0) 6151 / 93591 - 0 | Fax: +49 (0) 6151 / 93591 - 28

Website: www.lipowsky.com | E-Mail: info@lipowsky.de

1 Introduction	2
2 Getting started	3
2.1 Introduction	3
2.2 Installation	3
3 Session Description File (SDF)	4
3.1 How to create a LIN application	4
3.2 Introduction	4
3.3 Create a SDF	4
3.4 Common Setup	4
3.4.1 Emulation	4
3.4.2 GUI-Elements	5
3.4.3 Virtual signals	5
3.4.4 System signals	6
3.4.5 Macros	6
3.5 Example SDF	7
4 Start the bus communication	7
5 Updates	9
5.1 Update philosophy	9
5.2 Downloads	9
5.3 Installation	10
5.4 Check version	10
6 Support information	12

1 Introduction

This getting started guide will show you how to setup the Baby-LIN-3 Family to communicate with or monitor the LIN-Bus. Simply follow the next steps.



Information

This guide is made for new Baby-LIN-3 Family users. If you already have experience with Baby-LIN products or you are an advanced LIN-Bus user then this guide probably is not suited for you.



Information


This guide assumes you are using a Microsoft Windows operating system. If you use a Linux operating system please [contact us](#) to receive software for your distribution.

For this purpose, we will introduce the following components to you:


- LIN description file (LDF)
- Signal description
- Specification Diagnosis Services

From this information, the SessionDescriptionFile (SDF) can be created. The SDF is the linchpin in LINWorks-based applications.

The following graphic shows the typical workflow of a LIN-based application with our Baby-LIN-3 Family .

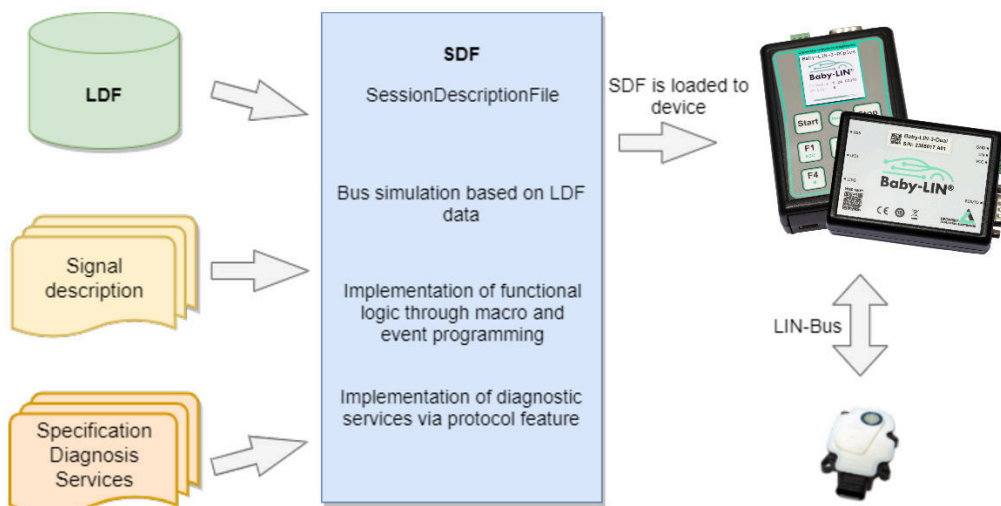

This diagram shows how the individual LINWorks software applications are linked to each other.

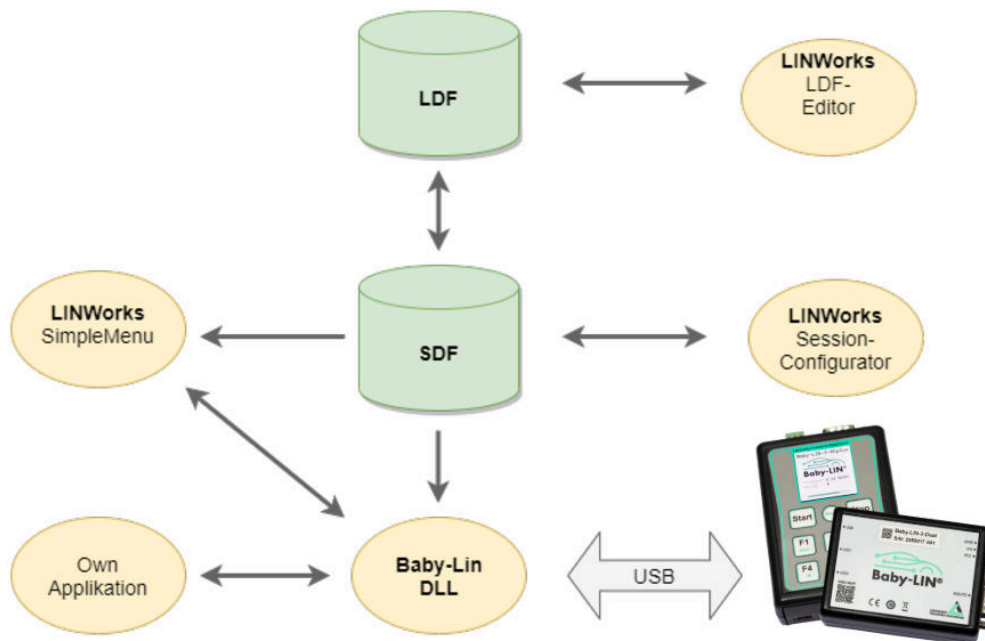

2 Getting started

2.1 Introduction

This getting started guide will show you how to create your Lin application using the information from the LDF and the signal descriptions. In the following, you will learn how to create an LDF and integrate it into the SDF. Furthermore, the Unifeid Diagnostic Services will be introduced. After you have successfully created the SDF, the Baby-LIN-3 Family can be operated in standalone mode, LIN bus data can be logged, or macros can be defined for autostart.



Information

This guide assumes you are using a Microsoft Windows operating system.

2.2 Installation

Before you can start using the Baby-LIN-3 Family you have to install several components of the LINWorks software.

If you have not already downloaded the LINWorks software, please download it now from our website under following link: www.lipowsky.de

The following components are required for this getting started guide:

- Baby-LIN driver
- SessionConf
- SimpleMenu
- LDFEdit

3 Session Description File (SDF)

3.1 How to create a LIN application

1. Requirement



A LIN node (slave) and a suitable LDF file are available. An application is to be implemented in which a simulated LIN master allows the node to be operated in a certain way.

2. Requirement



However, the information in the LDF is usually not sufficient. The LDF describes the access and interpretation of the signals, but the LDF does not describe the functional logic behind these signals. Therefore you need an additional signal description which describes the functional logic of the signals.

3. Requirement



If the task also requires diagnostic communication, a specification of the diagnostic services supported by the nodes is also required. In the LDF, only the frames with the respective data bytes are defined, but not their meaning.

These requirements can then be defined and edited together in a Session Description file (SDF).


3.2 Introduction

The Session Description file (SDF) contains the bus simulation based on the LDF data. The logic of the individual frames and signals can be programmed by macros and events. In addition to the LDF LIN schedule, further diagnostic services can be implemented in the SDF via protocols.

This makes the SDF the central working point of all LINWorks applications.

3.3 Create a SDF


The SessionConf software application is used to create and edit the SDF. For this purpose, an existing LDF is imported.

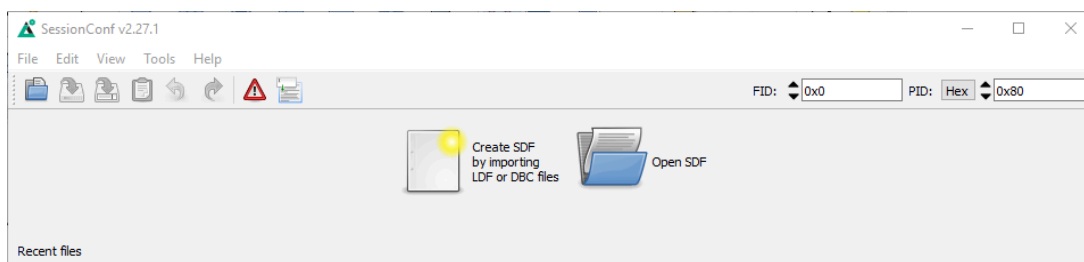

3.4 Common Setup


3.4.1 Emulation

Select Emulation in the navigation menu on the left. Here you can select which nodes you want to be simulated by the Baby-LIN-3 Family. If you only want to monitor the LIN-Bus, select nothing.

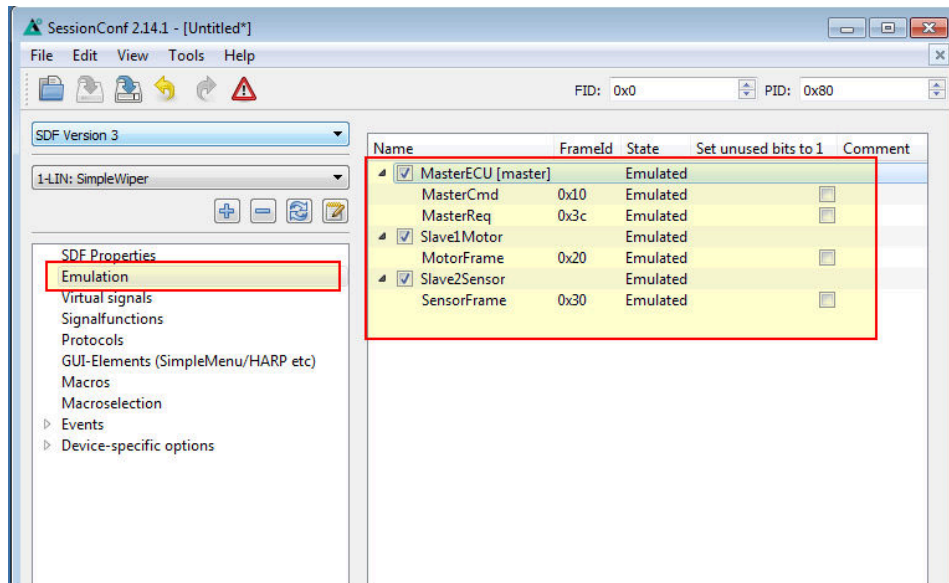

3.4.2 GUI-Elements

Select GUI-Elements in the navigation menu on the left. Here you can add signals you want to monitor.

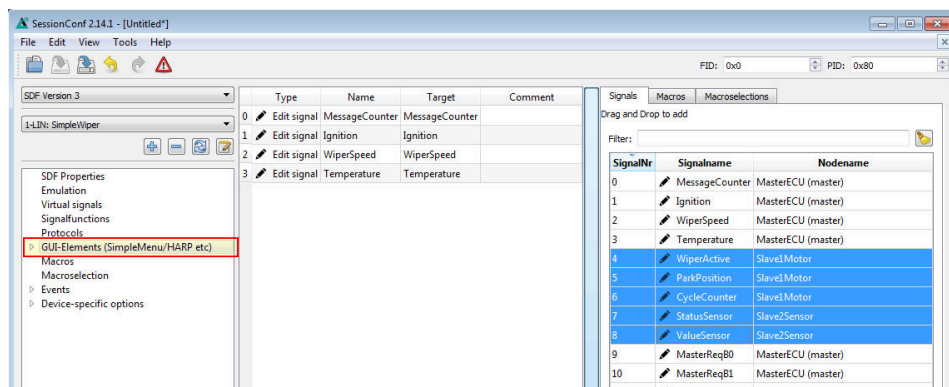

Information

There are other ways to monitor frames and signals, but this is a good and configurable starting point.

3.4.3 Virtual signals

Virtual signals can store values just like bus signals, but they do not appear on the bus. They can be used for many different tasks like:

- Temporary values, like counters
- Operands and results from calculations
- Store constants
- etc.

The size of a virtual signal can be set to 1...64 bits. important for use in the protocol feature.

Each signal has a default value that is set when the SDF is loaded.

SessionConf v2.30.12 - [C:/Users/jschaffhausen/Desktop/Software_Manual/SDF/Example.sdf*]

File Edit View Tools Help

Hide expert settings Required SDF version: v3.14

SDF Version 3

1-LIN: SimpleWiper

Section properties
Bus description
Emulation
Tables
Virtual signals
Signalfunctions
MessageCounter
Protocols
GUI-Elements (SimpleMenu/HARP etc)

Name	Length	Initial Value (decimal)	Initial Value (hexadecimal)	Initial Value (ASCII)	Reset on BUS start	Signed	
26 @@SYSBUSSTATE	32	0	0x0		<input type="checkbox"/>	<input type="checkbox"/>	Gets the state of the LIN- or CAN-Bus.
27 int8	32	0	0x0		<input type="checkbox"/>	<input checked="" type="checkbox"/>	
28 int16	16	0	0x0		<input type="checkbox"/>	<input checked="" type="checkbox"/>	
29 int32	32	0	0x0		<input type="checkbox"/>	<input checked="" type="checkbox"/>	
30 int64	64	0	0x0		<input type="checkbox"/>	<input checked="" type="checkbox"/>	
31 repetitions	32	0	0x0		<input type="checkbox"/>	<input type="checkbox"/>	
32 runtime	32	0	0x0		<input type="checkbox"/>	<input checked="" type="checkbox"/>	
33 sync	1	0	0x0		<input type="checkbox"/>	<input type="checkbox"/>	
34 failure	16	0	0x0		<input type="checkbox"/>	<input type="checkbox"/>	

3.4.4 System signals

System signals are virtual signals with reserved names. When a system signal is applied, a virtual signal is created at the same time and linked to a specific behavior.

In this way, you can access timer, input and output resources and system information.

System Variable Wizard

Choose variable
Choose a system variable to add to the virtual signals list

All Baby-LIN devices

Filter:

Name	Description
> Timers	
> Digital IO	
> Analog	
> System	
@@SYSINFO01	System information
@@SYSINFO02	System information
@@SYSINFO03	System information
@@SYSINFO04	System information
@@SYSINFO05	System information
@@SYSINFO06	System information
@@SYSINFO07	System information
@@SYSBUSSTATE	Gets the state of the LIN- or CAN-Bus.
@@SYSCFG1	
@@SYSCFG2	
@@SYSCFG9	
@@SYSCFG30	
@@SYSCFG31	
@@SYSCFG100	
@@SYSCFG101	
@@SYSCFG203	
@@SYSCFG204	
@@SYSINTERNAL	
@@SYSMACROS_CONCURRENT	

Name: @@SYSBUSSTATE
Readonly: No
Reset policy: Default (as defined in virtual signal table)
Description: Gets the state of the LIN- or CAN-Bus.

The following values are defined for the LIN-Bus:
Value Description
0 LIN-Bus voltage is missing
1 LIN-Bus voltage is available, but no schedule is running
2 LIN-Bus voltage is available and a schedule is running

The following values are defined for the CAN-Bus:
Value Description
0 CAN-Bus has not been started or was stopped
1 CAN-Bus was started, but no transmission was acknowledged and no frame was received from another node
2 CAN-Bus was started and either a transmission was acknowledged or a frame was received from another node

Available on these devices:
All Baby-LIN devices



Information

For more information and a list of all available system signals, please check the System Signal Wizard in SessionConf.

3.4.5 Macros

Macros are used to combine multiple operations into a sequence. Macros can be started by events or, can also be called from other macros in the sense of a Goto or Gosub. The DLL API calls a macro with the macro_execute command.

SessionConf v2.30.12 - [C:/Users/jschaffhausen/Desktop/Software_Manual/SDF/Example.sdf*]

File Edit View Tools Help

Hide expert settings Required SDF version: v3.14

SDF Version 3

1-LIN: SimpleWiper


Section properties
Bus description
Emulation
Tables
Virtual signals
Signalfunctions
MessageCounter
Protocols
GUI-Elements (SimpleMenu/HARP etc)
Macros
Execute

Macro number 1
Name Execute
Parameter count 0
Comment

Label	Condition	Command	Comment
0		Print on Debug report: "Macro starts"	
1		Gosub macro "BusStart0"	Macro BusStart is being executed
2		Gosub macro "Example(250, 1000)"	Macro Example is executed and is passed the values 250 and 1000 as parameters.
3		Print on Debug report: "Execution was successful"	

All Macro Commands can use signals from the LDF and signals from the Virtual Signal section like the system signals.


Another important function of the macros is to control the bus. The bus can be started and stopped via macro. Furthermore, the schedule can be selected and the status of the bus can be checked with the help of the system signals.

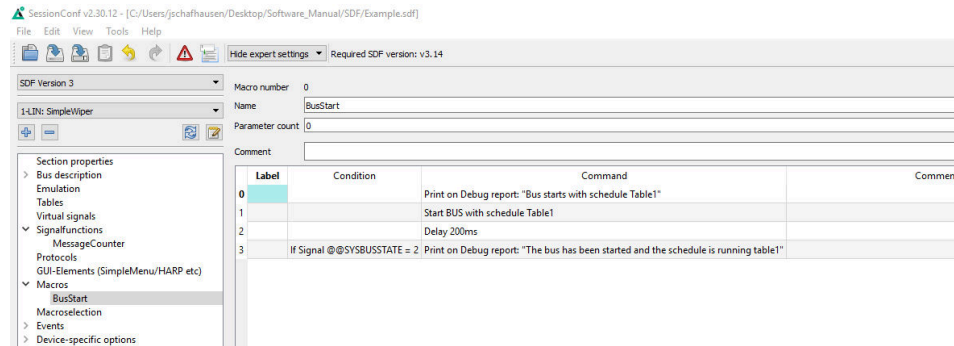

Each macro always provides 13 local signals:

`_LocalVariable1`, `_LocalVariable2`, ..., `_LocalVariable10`, `_Failure`, `_ResultLastMacroCommand`, `_Return`

The last 3 provide a mechanism to return values to a callcontext (`_Return`, `_Failure`) or to check the result of a previous macro command. The signals `_LocalVariableX` can be used e.g. as temporary variables in a macro.

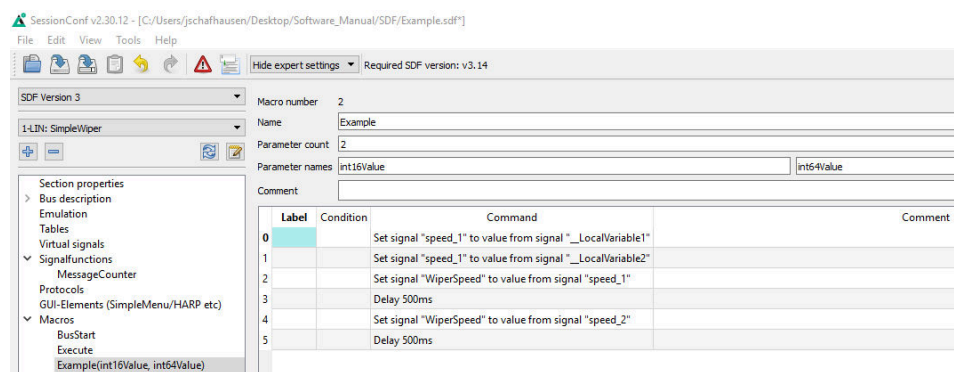



A macro can receive up to 10 parameters when called. In the macro definition, you can give these parameters names, which are then displayed on the left in the menu tree in brackets after the macro name. The parameters end up in the signals `_LocalVariable1`...`_LocalVariable10` of the called. If no parameters or less than 10 parameters are passed, the remaining `_LocalVariableX` signals receive the value 0.

3.5 Example SDF


You can download the example SDF under the section "08 | Examples SDF's" under the following link: [GettingStarted_Example.sdf](#)

4 Start the bus communication

Start the SimpleMenu. You should be able to find your Baby-LIN-3 in the device list on the left. Click the connect button and then load the SDF you created earlier.

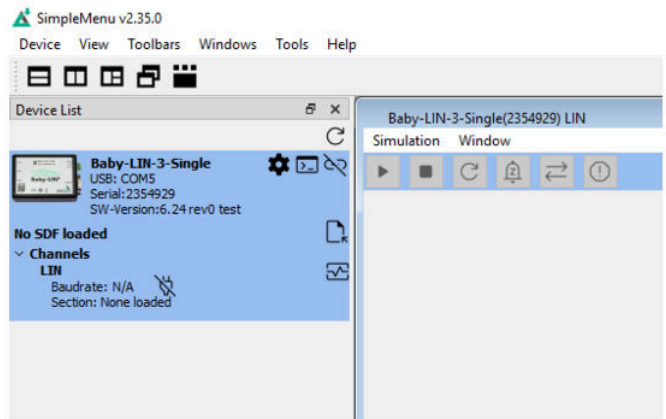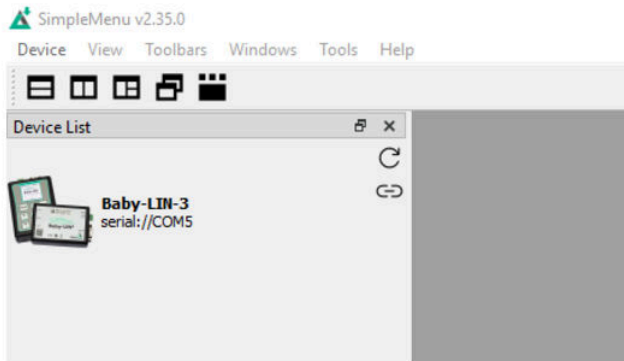

Now you can see the variables you added to monitor. To start the simulation/monitoring click on the start button.

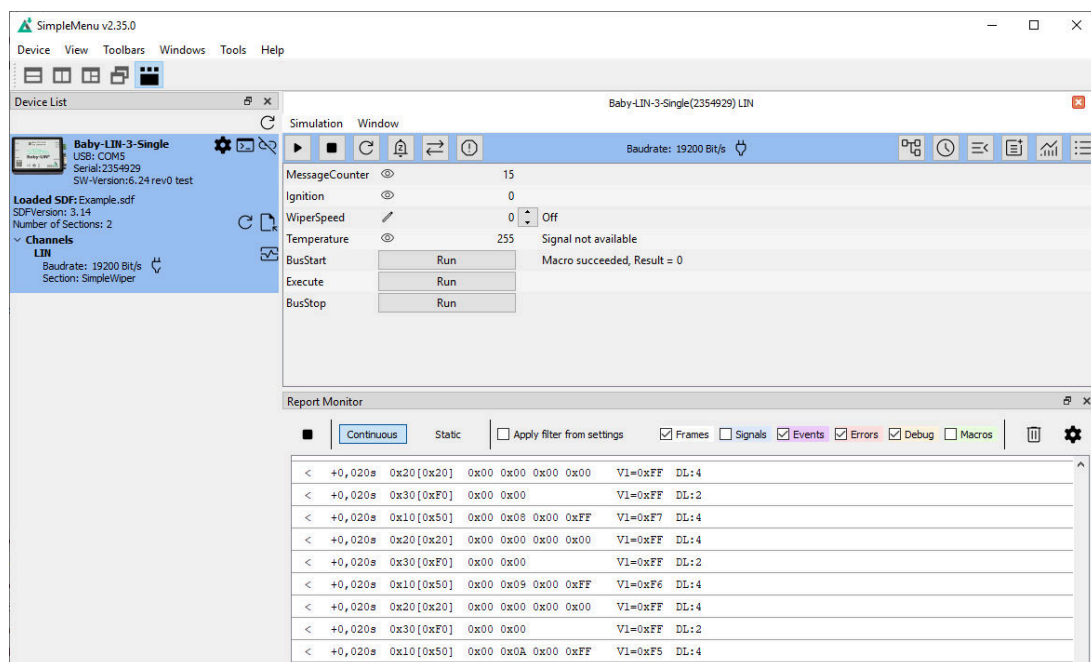

Now you will see the changes of these signals.

5 Updates

5.1 Update philosophy

The functionality and features of the Baby-LIN-3 are defined by the installed firmware as well as the used versions of the LINWorks and Baby-LIN-DLL.

As we are permanently working on product improvements, the software and firmware are updated periodically. These updates make new features available and solve problems, which have been discovered by our internal tests or have been reported by customers with earlier versions.

All the firmware updates are done in a way, that the updated Baby-LIN-3 will continue to work with an already installed, older LINWorks installation. So updating the Baby-LIN-3 firmware does not mean, that you necessarily have to update your LINWorks installation as well.

**Therefor it is highly recommended to always update
your Baby-LIN-3 Family to the latest available firmware version.**

We also recommend to also update your LINWorks software and Baby-LIN-DLL, if new updates get available. Since new versions of the SessionConf may introduce new features to the SDF format, it is possible that older firmware, SimpleMenu or Baby-LIN-DLL versions are not compatible. Therefor you should also update them.

**If you update your LINWorks it is highly recommended updating
the firmware of your Baby-LIN-3 Family to the latest available firmware version
as well as distributed the used versions of the Baby-LIN-DLL.**

So the sole reason to stay with an older LINWorks version should be, that you use a Baby-LIN-3 with outdated firmware version, which you can't upgrade for whatever reason.

**It is highly recommended updating the
Baby-LIN driver to the latest version.**

5.2 Downloads

The latest version of our software , firmware and documents can be found in the download area on our website www.lipowsky.de.



Information

The **LINWorks** archive contains not only the **LINWorks** software but also the manuals, datasheets, application notes and examples.
Only the device firmware packages are not included. The firmware is available as separate package.

Documents such as the data sheets or introductions to LIN bus communication are freely available for download. For all other documents and our LINWorks software you have to log in. If you do not have a customer account yet you can register on our website. After your account has been activated by us you will receive an e-mail and then you have full access to our download offer.

DOWNLOADS


HERE YOU CAN DOWNLOAD DOCUMENTS FREE OF CHARGE.
FOR THE LOCKED CONTENT, PLEASE LOG IN WITH YOUR CUSTOMER ACCESS.

01 | Baby-LIN Software

LinWorks Software | Version 2.31.1 [More](#)

File name: LinWorks-PCSoftware-2.X-CD.zip

Latest version of the LINWorks V2 software suite as zip archive. Contains current versions of LINWorks software, Baby-LIN DLL, associated wrappers and Baby-LIN USB drivers as well as data sheets, manuals and program examples.

(376.6MiB) 21.07.30  

LOGIN

If you were previously registered in the customer portal, you must register again. All you need is your e-mail address with which you were registered on the portal and a new password. Your account will then be activated directly.

E-Mail:

Password:
 [Password forgotten?](#)

[LOG IN](#)

You do not have an account yet? [Register](#)

REGISTER

E-Mail:

Password (minimum 6 characters):

Repeat password:

☐ I have read and accept the [privacy policy](#).*

☐ I would like to receive the newsletter.

[REGISTER](#)

You already have an account? [Log in](#)

5.3 Installation

The LINWorks suite is delivered with a handy setup application. If you already have installed an older version you can simply install the newer versions. The setup application will take care of overwriting the required files.

Simply follow these steps:

- Start the "Setup.exe".
- Select the components you want to install.
- Follow the instructions.



Attention

Please stop all running LINWorks applications and disconnect all Baby-LIN devices before starting



Version incompatibility


If you have used the SessionConf and SimpleMenu with version V1.x.x, the new version will be installed parallel to the old ones. Therefore you have to use the new shortcuts to start the new.

5.4 Check version

If you want to check the current version of the Baby-LIN-3 firmware or a LINWorks component the following chapter shows you how it is done:


Baby-LIN-3 firmware

Start the SimpleMenu and connect to the Baby-LIN-3. Now the firmware version is visible in the device list.

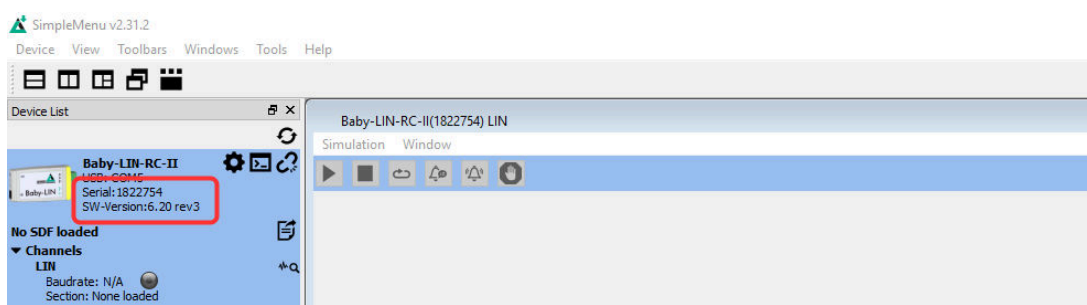

LINWorks [LDFEdit SessionConf SimpleMenu LogViewer]

Select the menu option "Help"/"About"/"Info". The info dialog will show the software version.

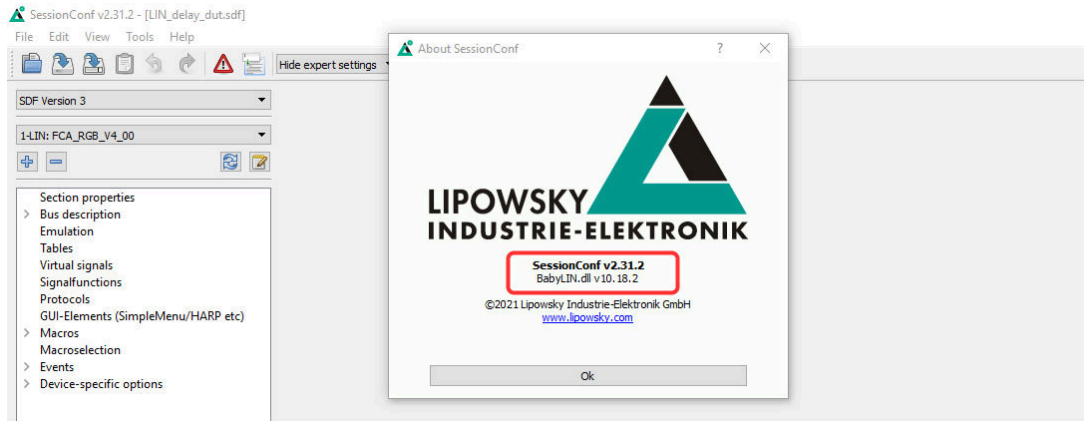

Baby-LIN-DLL

Call `BLC_getVersionString()`. The version is returned as string.

Baby-LIN-DLL .NET Wrapper

Call `GetWrapperVersion()`. The version is returned as string.

6 Support information

In case of any questions you can get technical support by email or phone. We can use TeamViewer to give you direct support and help on your own PC. This way we are able to sort out problems fast and direct. We have sample code and application notes available, which will help you to make your job.

Lipowsky Industrie-Elektronik GmbH realized many successful LIN and CAN related projects and therefor we can draw upon many years of experience in these fields. We also provide turn key solutions for specific applications like EOL (End of Line) testers or programming stations.

Lipowsky Industrie-Elektronik GmbH designs, produces and applies the Baby-LIN products, so you can always expect qualified and fast support.

Author	Lipowsky Industrie-Elektronik GmbH Römerstraße 57 64291 Darmstadt
Phone	+49 (0) 6151 / 93591 - 0
E-Mail	info@lipowsky.de
Website	www.lipowsky.com
CEO	Andreas Lipowsky
Commercial register	Darmstadt HRB 5139
VAT-ID	DE 111647423
Quality Management	DIN EN ISO 9001:2015